NEXUS Entrance Matting System

INSTALLATION INSTRUCTIONS



Model (UAFM-17)




ALUMINUM PROFILE

Corrosion resistant all aluminum matting panel can be used for outside as well as inside areas with normal to heavy traffic.

It prevents dirt and moisture from entering the building. Height of profile is 16.5 mm

Step 1: Entrance mat material inspection & verification at site

- 1. Confirm the arrivals of all components to site work in well and good condition
- 2. Components are as per below:
 - 1. Aluminum strips
 - 2. Frame (1)
 - 3. Frame (2)
 - 4. Anchor bolts as per clients approval.
 - 5. Regulation Angle.
- 3. To avoid any complication in installation, better to cross check the fabricated demission for all received Entrance Mat components according to final approved design.
- 4. Material to be stored in well controlled storage area till the date of installation.

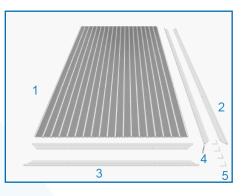







NEXUS Entrance Matting System

Model (URFM-24)

Step 2: Installation preparation

- 1. Inspect the installation location which should be in final surface preparation and clean access with dust free.
- 2. Mark the installation orientation as per below figure (X: Mat grid direction, Y:Walking direction)
- 3. Confirm the installa ti on depth requirm ents which should be 17mm (Z : Mat depth).
- 4. Barricade the working area with safety warning tape to avoid unrequired movements and dirt.

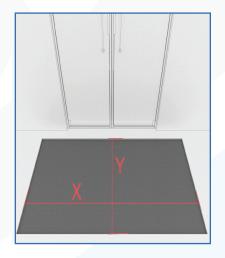

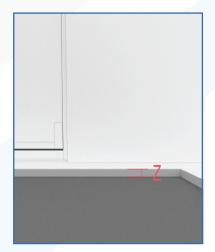

INSTALLATION


INSTRUCTIONS


UNITECH

NEXUS

Step 3: Installation Entrance Matt Frame and Supports

1. According to mat design frame installation has to be done by anchor bolts on the finished screed.

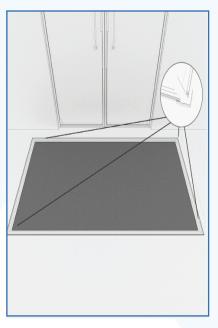

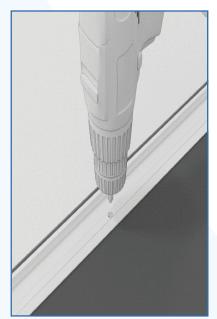





Model (URFM-24)

- UNITECH For Building and Construction Materials

Step 4: Frame & Supports Levelling

After frame installation completion , we have to confirm t hat frame is flat and flush with t he surface of finished floor.
Final cleaning and clearance from client need to be obtained before final mat installation.





INSTALLATION

INSTRUCTIONS

Step 5: Installation of Entrance Matt

1. Once Frame confirmed by client, we can ins tall the entr ance grids by lift ing mat with smooth w ooden form. 2. By removing the wooden form we will be completing fixing the mat in the desired frame location.

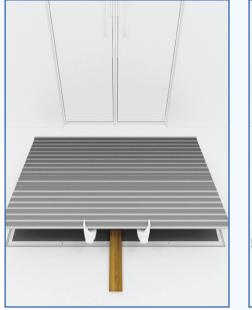

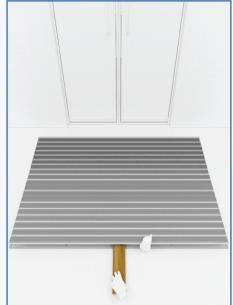





Model (URFM-24)

Step 6: Final Inspection & Handling Over

1. Once installation and leveling completed, you can call for final inspection to verify and confirm that work has been done as per project scope of work.

INSTALLATION

INSTRUCTIONS









